


SINCE 1896

Aluminum Strap Wrench Operating Instructions

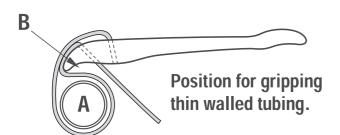

Position for gripping heavy walled tubing.

The picture above — along with the directions below — explain how to operate the Strap Wrench for turning in a clockwise rotation. For counterclockwise operation, simply reverse the handle 180° .

Thread the strap as pictured above with the item you wish to turn in the area marked "A." Adjust the strap until the item to be turned rests 1/4" to 1/2" below the curved portion of the handle, as marked by "B." Turn the handle in the clockwise direction. It should not be necessary to hold the strap when it is positioned correctly in the handle. Readjust for a new bite when necessary.

| | | Pipe Capacity | | Tube Capacity | |
|-------------------|--------------|----------------|----------------|------------------|----------------|
| Catalog Number | Item Code | Inches- Nom | Actual Ø mm | Actual Inches | Actual Ø mm |
| ASW12A | 02231 | 1/8 - 2 | 10 - 63 | 3 1/2 | 90 |
| ASW12A30 | 02232 | 1/8 - 2 | 10 - 63 | 7 1/2 | 190 |
| ASW18A | 02233 | 1 - 5 | 33 - 127 | 6 | 150 |
| ASW18A48* | 02234 | 1 - 5 | 33 - 127 | 12 | 300 |
| ASW24A | 02235 | 2 - 12 | 60 - 324 | 14 | 350 |

*Caution: Do not use this wrench beyond its pipe or tube capacity.

Reed Manufacturing Company 1425 West 8th Street Erie, PA 16502 USA




Phone: 800-666-3691 or 814-452-3691 Fax: 800-456-1697 or 814-455-1697 www.reedmfgco.com

0616-52239



SINCE 1896

Aluminum Strap Wrench Operating Instructions

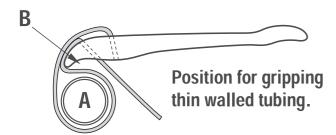

Position for gripping heavy walled tubing.

The picture above — along with the directions below — explain how to operate the Strap Wrench for turning in a clockwise rotation. For counterclockwise operation, simply reverse the handle 180°.

Thread the strap as pictured above with the item you wish to turn in the area marked "A." Adjust the strap until the item to be turned rests 1/4" to 1/2" below the curved portion of the handle, as marked by "B." Turn the handle in the clockwise direction. It should not be necessary to hold the strap when it is positioned correctly in the handle. Readjust for a new bite when necessary.

| | Item Code | Pipe Capacity | | Tube Capacity | |
|-------------------|--------------|-----------------|----------|------------------|----------------|
| Catalog Number | | In ches- Nom | | Actual Inches | Actual Ø mm |
| ASW12A | 02231 | 1/8 - 2 | 10 - 63 | 3 1/2 | 90 |
| ASW12A30 | 02232 | 1/8 - 2 | 10 - 63 | 7 1/2 | 190 |
| ASW18A | 02233 | 1 - 5 | 33 - 127 | 6 | 150 |
| ASW18A48* | 02234 | 1 - 5 | 33 - 127 | 12 | 300 |
| ASW24A | 02235 | 2 - 12 | 60 - 324 | 14 | 350 |

*Caution: Do not use this wrench beyond its pipe or tube capacity.

Reed Manufacturing Company 1425 West 8th Street Erie, PA 16502 USA



Phone: 800-666-3691 or 814-452-3691 Fax: 800-456-1697 or 814-455-1697 www.reedmfgco.com

0616-52239