

Quick Start Manual





True Union Design



Read the user's manual carefully before starting to use the unit. Producer reserves the right to implement changes without prior notice.

In-Line Paddle Wheel Flow Meter Sensor



Safety Information



- De-pressurize and vent system prior to installation or removal
- Confirm chemical compatibility before use
- DO NOT exceed maximum temperature or pressure specifications
- ALWAYS wear safety goggles or face-shield during installation and/or service
- DO NOT alter product construction



Warning | Caution | Danger

Indicates a potential hazard. Failure to follow all warnings may lead to equipment damage, injury, or death.



Hand Tighten Only

Over tightening may permanently damage product threads and lead to failure of the retaining nut.



Note | Technical Notes


Highlights additional information or detailed procedure.



Do Not Use Tools

Use of tool(s) may damage produced beyond repair and potentially void product warranty.



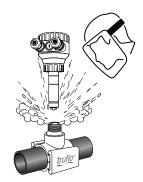



Personal Protective Equipment (PPE)

Always utilize the most appropriate PPE during installation and service of Truflo products.



Pressurized System Warning

Sensor may be under pressure. Take caution to vent system prior to installation or removal. Failure to do so may result in equipment damage and/or serious injury.



Please ensure that the Instruments are not to be subject to water hammer or pressure spikes! Always Pressure Test System with H2O Prior to Initial Start-Up

Before Before installation be certain the appropriate instrument has been selected considering operating pressure, full scale pressure, wetted material requirements, media compatibility, operating temperature, vibration, pulsation, desired accuracy and any other instrument component related to the service application including the potential need for protective attachments and/or special installation requirements. Failure to do so could result in equipment damage, failure and/or personal injury. Ensure only qualified personnel personnel are permitted to install and maintain this instrument.



Pressurize System Warning

Sensor may be under pressure, take caution to vent system prior to installation or removal. Failure to do so may result in equipment damage and/or serious injury.



Please Ensure Full Pipe

TK Series can be installed in a horizontal or vertical direction. Please ensure enough length of straight pipe to avoid turbulence that can effect readings.

Min 10x Pipe Diameters Upstream 3x Pipe Diameters Downstream

A Bag Filter or Y Strainer Filtering Device upstream to Avoid the Paddle Wheel from being damaged by the solids or fibers - max 10% Particle Size - Not to Exceed .5mm Cross Section or Length. Please do not flush the pipe after the Flow Meter is installed with compressed air this may damage the ceramic shaft and will void warranty.

24-0377 © Icon Process Controls Ltd.

Truflo® — TKB Series In-Line Paddle Wheel Flow Meter Sensor



Industry's Most Accurate & Reliable Paddle Wheel Flow Meters



The TK Series in-line plastic paddle wheel flow meter has been engineered to provide long-term accurate flow measurement in tough industrial applications.

The paddle wheel assembly consists of a engineered Tefzel® paddle and micro-polished zirconium ceramic rotor pin and bushings.


High performance Tefzel® and Zirconium materials have been selected due to their excellent chemical and wear resistant properties.

- 1/2" 4" Line Sizes

New ShearPro® Design

- Contoured Flow Profile
- 78% Less Drag than Old Flat Paddle Design*

*Ref: NASA "Shape Effects on Drag"

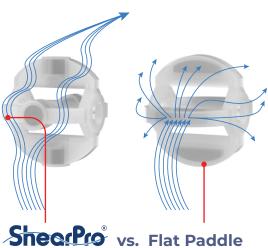

Tefzel® Paddle Wheel


Superior Chemical And Wear Resistance vs PVDF

Zirconium Ceramic Rotor | Bushings

- ♥ Up to 15x the Wear Resistance
- Integral Rotor Bushings Reduce Wear and Fatigue Stress

360° Shielded Rotor Design

- Eliminates Finger Spread
- No Lost Paddles

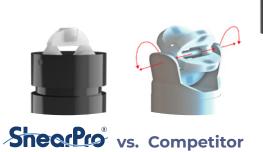

3

Truflo® — TKB Series In-Line Paddle Wheel Flow Meter Sensor



Technical Specifications



General	0.7. 77.6/	0.1. 70 /							
Operating Range	0.3 to 33 ft/s	0.1 to 10 m/s							
Pipe Size Range	½ to 4" DN15 to DN100								
Linearity	±0.5% of F.S @ 25°C 77°F								
Repeatability	±0.5% of F.S @ 25°C 77°F								
Fluid		Water or Chemical Liquid-Viscosity Range: .5-20 centistokes							
Flow Velocity	10 m / s max								
Low Cut	0.3 m / s min.								
Operating Pressure	150 PSI (10 Bar) @ Ambient Temp-Non Sł	nock							
Range Ability	10:1								
Response Time	Real Time								
Flow Total Meter	Range = 0~999999 ; Unit = Gallon or Liter	or Ton (KL) Selectable							
Repeatability	Range = 0.0~999.9 ; Unit = GPM or LPM o	r CMH Selectable							
Accuracy	± 0.5% of F.S. @ 25°C								
Wetted Materials									
Sensor Body	PVC (Dark) PP (Pigmented) PVDF (Nat	PVC (Dark) PP (Pigmented) PVDF (Natural)							
O-Rings	FKM EPDM* FFKM*	FKM EPDM* FFKM*							
Rotor Pin Bushings	Zirconium Ceramic ZrO2								
Paddle Rotor	ETFE Tefzel®	ETFE Tefzel®							
Electrical									
Operating Voltage Battery	3.0 VDC								
Battery	Lithium Battery (CR2477T)	Lithium Battery (CR2477T)							
Life of battery	>1 Year Normal >2 Years Eco Mode	>1 Year Normal >2 Years Eco Mode							
Max. Temperature/Pressu	ire Rating - Standard and Integral Se	nsor Non-Shock							
PVC	180 psi @ 68°F 40 Psi @ 140°F	12.5 bar @ 20°C 2.7 bar @ 60°C							
PP	180 psi @ 68°F 40 psi @ 190°F	12.5 bar @ 20°C 2.7 bar @ 88°C							
PVDF	200 psi @ 68°F 40 psi @ 240°F	14 bar @ 20°C 2.7 bar @ 115°C							
Operating Temperature									
PVC	32°F to 140°F	0°C to 60°C							
PP	-4°F to 190°F	-20°C to 88°C							
PVDF	-40°F to 240°F	-40°C to 115°C							
Outputs									
TKB Series	Flow Frequency Pulse - Total								
Standards and Approvals									
CE FCC RoHS Compliant									

*Optional

In-Line Paddle Wheel Flow Meter Sensor



Model Selection



PVC								
Size	End Connections	Part Number						
1/2"	Sch 80 Soc	TKB-15-P						
3/4"	Sch 80 Soc	TKB-20-P						
1"	Sch 80 Soc	TKB-25-P						
1 1/2"	Sch 80 Soc	TKB-40-P						
2"	Sch 80 Soc	TKB-50-P						
3"	Flanged	TKB-80-P						
4"	Flanged	TKB-100-P						

PP									
Size	End Connections	Part Number							
1/2"	NPT	TKB-15-PP							
3/4"	NPT	TKB-20-PP							
1"	NPT	TKB-25-PP							
1 1/2"	NPT	TKB-40-PP							
2"	NPT	TKB-50-PP							
3"	Flanged	TKB-80-PP							
4"	Flanged	TKB-100-PP							

	PVDF	
Size	End Connections	Part Number
1/2"	NPT	TKB-15-PF
3/4"	NPT	TKB-20-PF
1"	NPT	TKB-25-PF
1 1/2"	NPT	TKB-40-PF
2"	NPT	TKB-50-PF

PVC Socket Ends (Std) PP/PVDF NPT Ends (Std)

Add 1st Suffix (end connection):

Size

1/4"

2"

- -T ► NPT End Connectors (on PVC)
- -B ▶ Butt Fused End Connections for PP or PVDF

316 SS

-F ► Flange ANSI 150lb - Consult Factory

NPT

NPT

NPT NPT

Add 2nd Suffix (seals): -E ► EPDM Seals

FKM (std, no suffix required)

- -K ► FFKM | Kalrez® Seals

End Connections Part Number NPT TK3B-08-SS NPT TK3B-10-SS NPT TK3B-15-SS NPT TK3B-20-SS NPT TK3B-25-SS

TK3B-40-SS

TK3B-50-SS

TK3B-80-SS

TK3B-100-SS

Add 1st Suffix (end connection):

- -T ► NPT End Connectors
- -SE ► Sanitary Consult Factory for Pricing
- -F ► Flange ANSI 150lb Consult Factory

Add 2nd Suffix (seals):

FKM (std, no suffix required)

- -E ► EPDM Seals
- -K ► FFKM | Kalrez® Seals

Exploded View



- 1. Polycarbonate Cover
- 2. Flow Controller
- 3. Hall Pickup Sensor
- 4. Redesigned Rotor Assembly
- 5. Body | PVC | PP | PVDF *
- 6. Re-inforced Inserts
- 7. Shearpro Contoured Rotor





24-0377 © Icon Process Controls Ltd

Truflo[®] — TKB Series In-Line Paddle Wheel Flow Meter Sensor



Programming










Change digit value





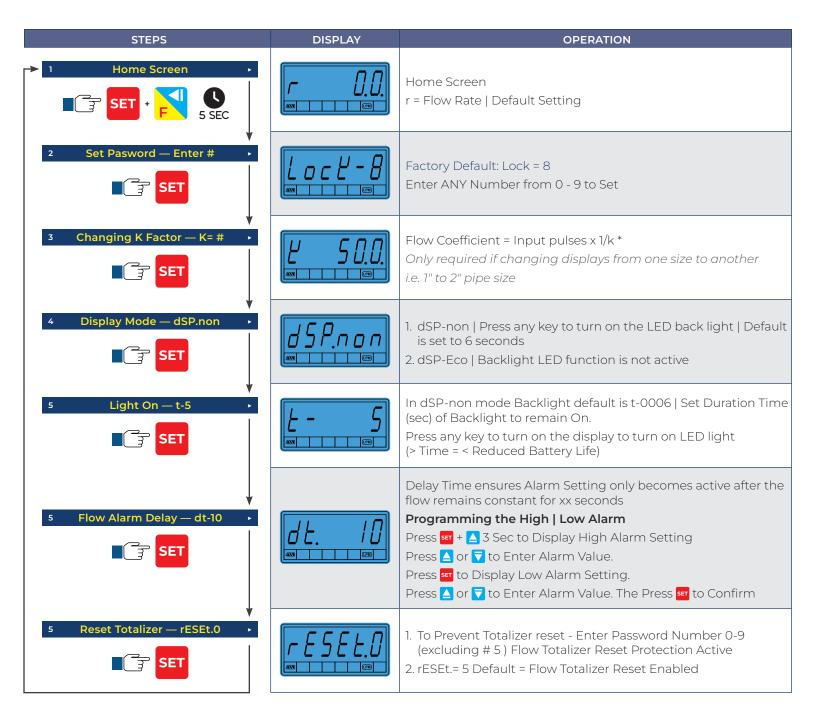

In-Line Paddle Wheel Flow Meter Sensor



Flow Totalizer



Display the Current Value of Flow Totalizer: Range 0~99,999,999

- 1. Hold the 🔼 key for 3 seconds to show current value of the 7th 8th digits
- 2. After releasing the 🛕 key the current value of the 1st 6th digits will be displayed

Alarm Limit of Flow Rate Meter

How to Set the Alarm Limit of Flow Rate Meter?


The **Flow Total** | **Totalizer** can be protected from an accidental reset. To set lockout program set any number from 0-9 excluding "5". The factory default unlock number 5.

Totalizer Reset → Press both ▼ & △ keys together for second

Low Battery Notification

Voltage of Battery	Symbol	Status				
3.0V		Full Scale				
< 3.0V		Mild Scale				
< 2.8V		Low Scale (Pilot BAT Flashing)				
< 2.6V		Low Voltage (Pilot BAT & Display Flashing)				

Displaying Flow Rate | Flow Totalizer

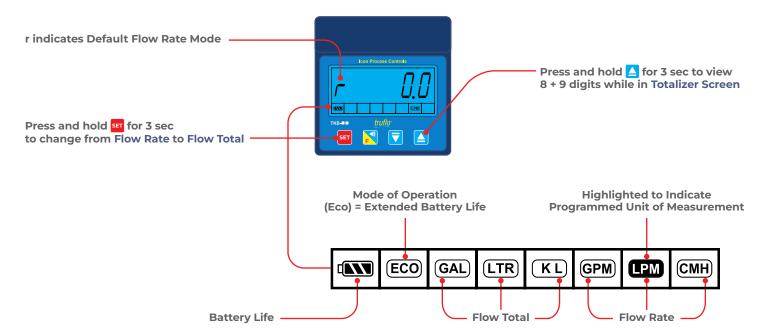

In-Line Paddle Wheel Flow Meter Sensor



K-Factors for TK Series

Size	K-Factor				
1/4"	547				
3/8"	300				
1/2"	124				
3/4"	72				
7"	54				
1½"	19				
2"	10.3				
3"	4.7				
4"	2.1				
▲ K-Factor is Pre-Programmed					

Min/Max Flow Rates


Direction (OD)	LPM GPM	LPM GPM			
Pipe Size (O.D.)	0.3m/s min.	10m/s max			
½" DN15	3.5 1.0	120.0 32.0			
³ / ₄ " DN20	5.0 1.5	170.0 45.0			
1" DN25	9.0 2.5	300.0 79.0			
1 ½" DN40	25.0 6.5	850.0 225.0			
2" DN50	40.0 10.5	1350.0 357.0			
2 ½" DN60	60.0 16.0	1850.0 357.0			
3" DN80	90.0 24.0	2800.0 739.0			
4" DN100	125.0 33.0	4350.0 1149.0			




Pressure vs. Temperature Psi H₂O | Non-Shock

Nominal Size		PVC			PP			PVDF						
		30° F	71° F	106° F	121° F	-5° F	86° F	121° F	141° F	-5° F	71° F	106° F	141° F	176° F
Inches	mm	70° F	105° F	120° F	140° F	85° F	120° F	140° F	175° F	70° F	105° F	140° F	175° F	210° F
1/2 - 2	15-50	150	120	100	30	150	110	90	55	150	125	100	85	55
2½	65	150	120	100	NA	150	95	70	40	150	125	100	85	55
3	80	150	120	100	NA	150	95	70	40	150	125	100	85	60
4	100	150	120	100	NA	150	95	70	40	150	125	100	85	60

Dimensions

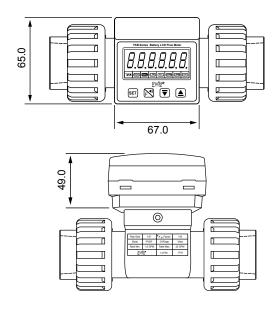








In-Line Paddle Wheel Flow Meter Sensor




Battery Replacement



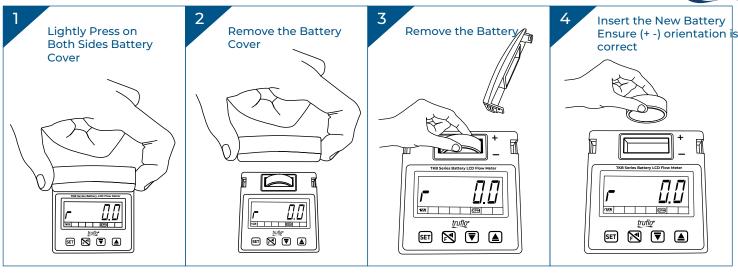

Procedure to Rotate Display

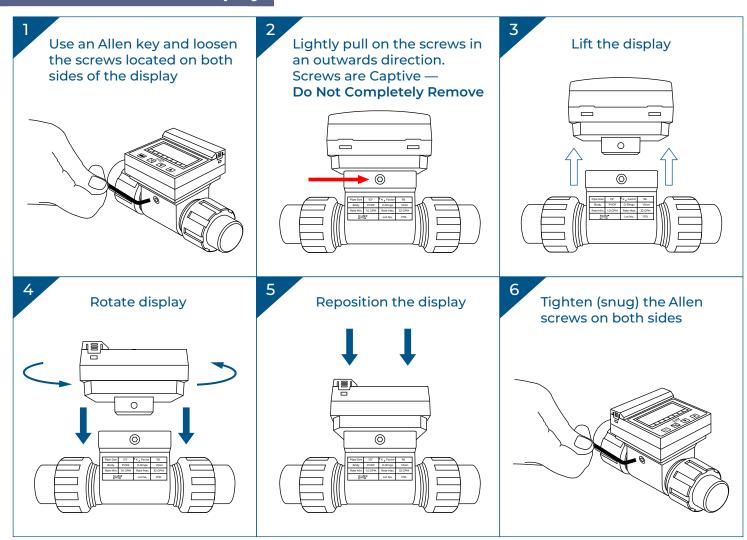


In-Line Paddle Wheel Flow Meter Sensor



Installation Position



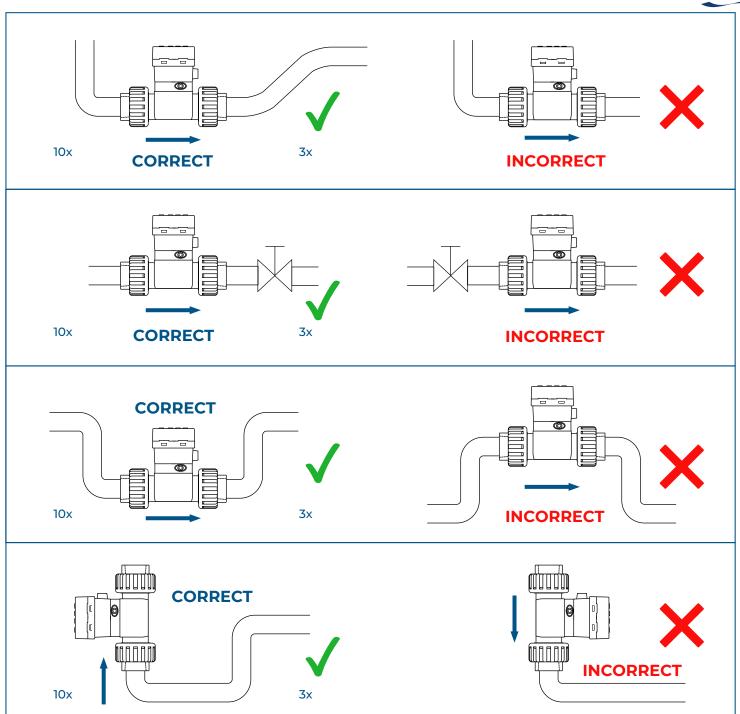

Please Ensure Full Pipe

TK Series can be installed in a horizontal or vertical direction.

Please ensure enough length of straight pipe to avoid turbulence that can effect readings.

Note: Min 10x Pipe Diameters Upstream 3x Pipe Diameters Downstream.

A plastic basket strainer, bag filter or Y strainer filtering device upstream to avoid the paddle wheel from being damaged by the solids or fibers - max 10% particle size - **Not to Exceed .5mm Cross Section or Length.**Please do not flush the pipe after the flow meter is installed with compressed air as this may damage the ceramic shaft and will void warranty.

Truflo® — TKB Series In-Line Paddle Wheel Flow Meter Sensor



Warranty, Returns and Limitations



Warranty

Icon Process Controls Ltd warrants to the original purchaser of its products that such products will be free from defects in material and workmanship under normal use and service in accordance with instructions furnished by Icon Process Controls Ltd for a period of one year from the date of sale of such products. Icon Process Controls Ltd obligation under this warranty is solely and exclusively limited to the repair or replacement, at Icon Process Controls Ltd option, of the products or components, which Icon Process Controls Ltd examination determines to its satisfaction to be defective in material or workmanship within the warranty period. Icon Process Controls Ltd must be notified pursuant to the instructions below of any claim under this warranty within thirty (30) days of any claimed lack of conformity of the product. Any product repaired under this warranty will be warranted only for the remainder of the original warranty period. Any product provided as a replacement under this warranty will be warranted for the one year from the date of replacement.

Returns

Products cannot be returned to **Icon Process Controls Ltd** without prior authorization. To return a product that is thought to be defective, go to www.iconprocon.com, and submit a customer return (MRA) request form and follow the instructions therein. All warranty and non-warranty product returns to **Icon Process Controls Ltd** must be shipped prepaid and insured. **Icon Process Controls Ltd** will not be responsible for any products lost or damaged in shipment.

Limitations

This warranty does not apply to products which: 1) are beyond the warranty period or are products for which the original purchaser does not follow the warranty procedures outlined above; 2) have been subjected to electrical, mechanical or chemical damage due to improper, accidental or negligent use; 3) have been modified or altered; 4) anyone other than service personnel authorized by Icon Process Controls Ltd have attempted to repair; 5) have been involved in accidents or natural disasters; or 6) are damaged during return shipment to Icon Process Controls Ltd reserves the right to unilaterally waive this warranty and dispose of any product returned to Icon Process Controls Ltd where: 1) there is evidence of a potentially hazardous material present with the product; or 2) the product has remained unclaimed at Icon Process Controls Ltd for more than 30 days after Icon Process Controls Ltd has dutifully requested disposition. This warranty contains the sole express warranty made by Icon Process Controls Ltd in connection with its products. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. The remedies of repair or replacement as stated above are the exclusive remedies for the breach of this warranty. IN NO EVENT SHALL Icon Process Controls Ltd BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING PERSONAL OR REAL PROPERTY OR FOR INJURY TO ANY PERSON. THIS WARRANTY CONSTITUTES THE FINAL. COMPLETE AND EXCLUSIVE STATEMENT OF WARRANTY TERMS AND NO PERSON IS AUTHORIZED TO MAKE ANY OTHER WARRANTIES OR REPRESENTATIONS ON BEHALF OF Icon Process Controls Ltd. This warranty will be interpreted pursuant to the laws of the province of Ontario, Canada.

If any portion of this warranty is held to be invalid or unenforceable for any reason, such finding will not invalidate any other provision of this warranty.

For additional product documentation and technical support visit:

www.iconprocon.com | e-mail: sales@iconprocon.com or support@iconprocon.com | Ph: 905.469.9283



24-0377 © Icon Process Controls Ltd.